


Installation Instructions for Breathable® Mesh Crib Liner

Fits Four-Sided Slatted & Solid-Back Cribs | View installation video at mylittlesnow.fr



MY LITTLE SNOW

Package includes:

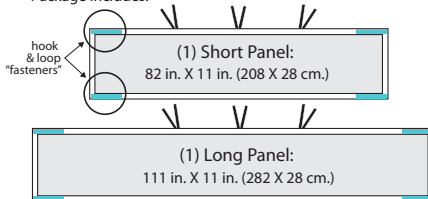

Fits four-sided slatted and solid-back cribs. Does not fit solid-end cribs or cribs with attached changing tables.

Care: For best results, machine wash warm, gentle cycle. Secure all fabric fasteners before laundering to avoid snagging. Wash separately or with like colors. Only non-chlorine bleach when needed. Tumble dry low.

⚠ WARNING

To reduce the risk of **SUFFOCATION**:

- **Keep tight against side of crib.** Do not use if liner is loose or sags down toward sleeping surface.
- **Never put pillows or anything else in crib** that could trap baby against this liner.
- **Only use in a crib without broken parts or missing slats.** This liner will not fix a broken crib or prevent baby from falling out. **Never use in a toddler bed or bassinet.**

To help prevent **ENTANGLEMENT** or **STRANGULATION**, position ties to outside of crib and secure tightly. Remove this liner when baby can pull to a stand using crib side (starting about 6 months). Older babies can use liner to climb out of crib.

Four-Sided Slatted Crib: Long Panel covers 1 long side of crib and most of both short sides. Short Panel covers long side of crib and part of both short sides.

1

VIEW: INSIDE BACK OF CRIB

Position Long Panel INSIDE Back of Crib

1. Center Long Panel INSIDE slats, along back of crib, as shown.
2. Make sure ties face UPWARDS and are OUTSIDE the crib.
3. In each corner (I and II), weave ends of Long Panel BEHIND the crib slats (a, b, c and d) so that liner passes in front of back corner posts.
4. Pull each end of Long Panel along slats inside the crib, toward the front corner posts (III and IV), as shown.

2

Wrap & Attach Ends of Long Panel

1. Take end of Long Panel and wrap it behind 1st crib slat next to front corner post (III). Since crib slats vary in position and width, you may need to choose a different slat instead if it feels too loose or there seems to be extra material.
2. Secure around crib slat by pressing together top & bottom edges of Long Panel. Make sure there is a snug fit to prevent any sagging.
3. Repeat for other side (front corner post IV).
4. Tuck bottom edge of Long Panel below mattress.

3

VIEW: OUTSIDE BACK OF CRIB

Secure Ties of Long Panel

1. Center ties as best as possible on outside back of crib, knowing that crib slats may vary in position and width.
2. Tightly tie all 3 ties OUTSIDE crib slats.
3. Make sure Long Panel stands up, pulling taut to tighten if it sags. It should not sag down.

4

VIEW: INSIDE FRONT OF CRIB

Position Short Panel INSIDE Front of Crib

1. Center Short Panel INSIDE slats, along front of crib, as shown.
2. Make sure ties face UPWARDS and are OUTSIDE the crib.
3. In each corner (III and IV), weave ends of Short Panel BEHIND the crib slats (e, f, g and h) so that Short Panel passes in front of front corner posts.

5

Wrap & Attach Ends of Short Panel

1. Take end of Short Panel and wrap it behind 2nd crib slat next to front corner post (III). It will sit in front of the Long Panel. Since crib slats may vary in position and width, you may need to choose a different slat instead if it feels too loose or there seems to be extra material.
2. Secure around crib slat by pressing together top & bottom edges of Short Panel. Make sure there is a snug fit to prevent any sagging.
3. Repeat for other side (front corner post IV).
4. Tuck bottom edge of Short Panel below mattress.

6

VIEW: OUTSIDE FRONT OF CRIB

Secure Ties of Short Panel

1. Center ties as best as possible on outside front of crib, knowing that crib slats may vary in position and width.
2. Tightly tie all 3 ties OUTSIDE crib slats.
3. Make sure Short Panel stands up, pulling taut to tighten if it sags. It should not sag down.

Solid-Back Crib: Use Long Panel only to cover slatted long side of crib and both short sides.

1. Center Long Panel INSIDE slats, along front of crib, as shown. (You will not use the Short Panel.)
2. Make sure ties face UPWARDS and are OUTSIDE the crib.
3. Follow **Step 2** and **Step 3** for weaving through slats and attaching ends of Long Panel to outside of crib. Because back of crib is solid, back corner posts will be uncovered by mesh.

